

MANUAL USE AND MAINTENANCE




MEDIA 26III°B – 32II°B

ED. 12-2007

EN

Doc. 10014286
Ver. AA



The contained descriptions in the present publication are not binding. The company therefore reserves itself the right to bring in whatever moment possible organs changes, details or supplies of accessories, that it holds convenient for an improvement, or for any demand of constructive or commercial character.


The partial reproduction of the texts and diagrammes contained in the present catalog, is forbidden by law.

The company reserves itself the right to bring changes of technical character and/or of endowment. The images are meant of pure reference and not binding in terms of design and endowment.

Symbols used in the manual



Symbol of the book open with letter i
It points out that this document is a manual of instructions.

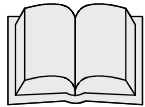

Symbol of the open book
It points out to the operator to read the manual of use before using the machine.



Symbol of warning
Read attentively the sections preceded by this symbol for the safety of the operator and the machine



SUMMARY

ON CONSIGNMENT OF THE MACHINE	4
INTRODUCTORY COMMENT	4
TECHNICAL DATA	4
SYMBOLGY USED ON THE MACHINE	5
SYMBOLGY USED IN THE MANUAL	7
MACHINE PREPARATION	8
1. HANDLING OF THE PACKED MACHINE	8
2. HOW TO UNPACK THE MACHINE.....	8
3. INSTALLATION OF THE BATTERIES INTO THE MACHINE	9
4. CONNECTION OF THE BATTERY CHARGER.....	9
5. RECHARGE OF THE BATTERIES.....	10
6. CONNECTION OF THE BATTERY CONNECTOR.....	10
7. BATTERIES' INDICATOR	10
8. SQUEEGEE ASSEMBLY.....	11
9. ADJUSTMENT SQUEEGEE HEIGHT.....	11
10. ADJUSTMENT SQUEEGEE INCLINATION	11
11. BRUSHES ASSEMBLY	12
12. RECOVERY TANK	13
13. OUTER FILTER	13
14. SOLUTION WATER	13
GENERAL RULES OF SECURITY	14
PERFORMANCE	15
SETTING FOR WORK.....	15
MOVEMENT	16
BRAKE.....	16
DEVICE TOO FULL	17
ON COMPLETION OF THE WORK	18
DAILY MAINTENANCE	19
CLEANING RECOVERY TANK	19
CLEANING SUCTION FILTER	20
CLEANING SOLUTION FILTER.....	20
CLEANING OF THE SQUEEGEE.....	20
REPLACEMENT REAR SQUEEGEE RUBBER	20
REPLACEMENT FRONT SQUEEGEE RUBBER.....	21
DISASSEMBLY OF THE ROTATING BRUSHES.....	21
WEEKLY MAINTENANCE	22
CLEANING OF THE SQUEEGEE HOSE.....	22
CHECK BRAKE.....	22
REPLACEMENT SPLASH GUARD BRUSHES BASE	22
TROUBLE SHOOTING GUIDE	23
INSUFFICIENT WATER ONTO THE BRUSHES.....	23
THE MACHINE DOES NOT CLEAN SATISFACTORILY	23
THE SQUEEGEE DOES NOT DRY PERFECTLY	23
EXCESSIVE FOAM PRODUCTION	23
CHOICE AND USE OF BRUSHES	24
EC DECLARATION OF CONFORMITY	25



On consignment of the machine

When the machine is consigned to the customer, an immediate check must be performed to ensure all the material mentioned in the shipping documents have been received and moreover to find out that the machine has not suffered damage during transportation. If damage has occurred, get the shipping agent to verify immediately the amount and nature of the damage suffered and at the same time inform our claim department. It is only by prompt action of this type that compensation for damage may be successfully claimed.

Introductory comment


This is a floor cleaning machine which, using the mechanic abrasive action of a rotary brush and the chemical action of a solution water-detergent, is able to clean any type of floor, picking up during its advance movement, the removed dirt and the detergent solution which has not been absorbed from the floor.

The machine must be used only for such purpose. We would impress upon you that any machine will function efficiently and operate successfully, only if used correctly and maintained in fully efficient working order. We therefore suggest you to read this instruction booklet carefully and re-read it whenever difficulties arise in the course of machine use. Our Service Department is at your disposal for all such advice and servicing as may prove necessary.


TECHNICAL DATA	U.M.	Media 26	Media 32
Cleaning width	mm	660	830
Squeegee width	mm	1015	1115
Working capacity, up to	sqm/h	2310	2905
Brushes diameter (No. 2)	∅ mm	345	430
Brushes rpm	rpm	160	133
Max. brushes pressure	kg	38	40
Power brushes motor	W	750	1000
Power traction motor	W	450	450
Type of drive		aut.	aut.
Movement speed	km/h	0÷3,5	0÷3,5
Max gradient		10%	10%
Power suction motor	W	350	350
Suction vacuum	mbar	108	108
Capacity solution tank	l	80	80
Capacity recovery tank	l	85	85
Machine length	mm	1495	1560
Machine height	mm	1125	1125
Machine width	mm	710	865
Tension and capacity batteries	V/Ah	24/240	24/240
Batteries weight	kg	170	170
Machine weight (empty and without batteries)	kg	188	196
Acoustic radiation pressure level (in conformity with IEC 704/1)	dB (A)	<70	<70
Vibration level	m/sqs	2.83	2.83




SYMBOLGY USED ON THE MACHINE

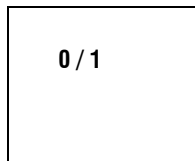


Indicates the general switch

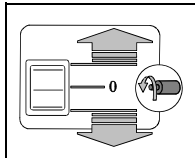


Indicates the motor switch

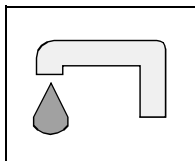


Symbol denoting cock
Indicates the cock lever
Indicates the solenoid valve switch

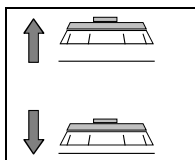


Symbol denoting up-down brushes base
Indicates the lever of the brushes base lifting

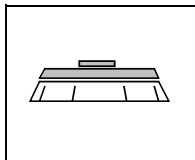


Symbol denoting brush
Indicates the signal lamp of the brushes motor

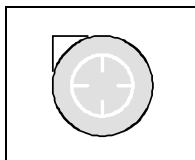


Symbol denoting suction motor
Indicates the suction motor switch

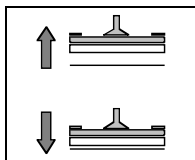

Symbol denoting up - down of the squeegee
Indicates the squeegee lever

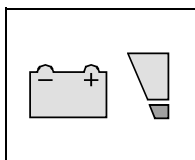


Symbol denoting charge level of the batteries

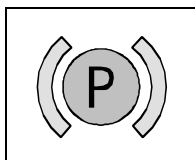


Symbol denoting brake
It is used on top of the emergency and parking brake lever




SYMBOLGY USED ON THE MACHINE

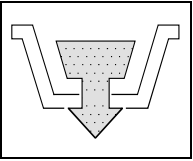

Indicates the exhaust pipe of the recovery tank

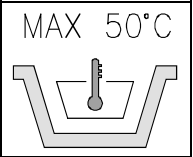

Indication of the maximum temperature of the solution detergent
Placed near the charging hole of the solution tank

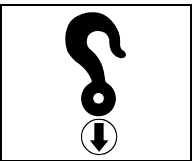

Symbol denoting the coupling
Indicates the anchor points and the load direction



SYMBOLGY USED IN THE MANUAL



Indicates danger of gas exhalations and emission of corrosive liquids



Indicates fire danger
Do not approach with free flames




MACHINE PREPARATION

1. HANDLING OF THE PACKED MACHINE

The machine is packed in a specific package provided on a pallet for the handling with fork trucks. Do not place more than two packages on top of each other. The total weight is 160 kg for MEDIA26, 180 kg for MEDIA32.



The overall dimensions are:

	MEDIA 26	MEDIA 32
A:	1230mm	1220mm
B:	720mm	960mm
C:	1490mm	1700mm

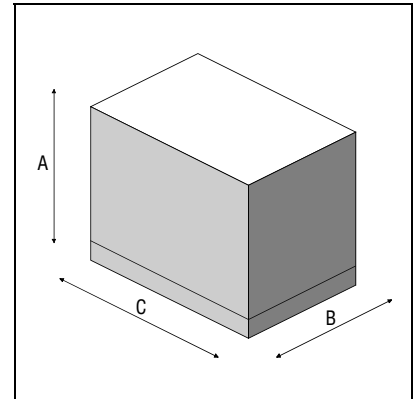

2. HOW TO UNPACK THE MACHINE

1. Take off the outer package
2. The machine is fixed on the pallet with wooden wedges which block the wheels and with metallic brackets
3. Take off the brackets and the wedges
4. Using a chute, get the machine down from the pallet, pushing it in reverse motion. Avoid violent blows to the base
5. Keep the pallet for eventual transport necessities

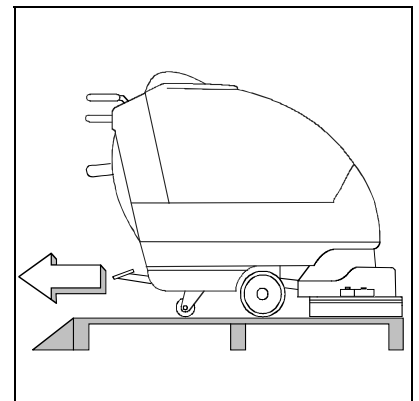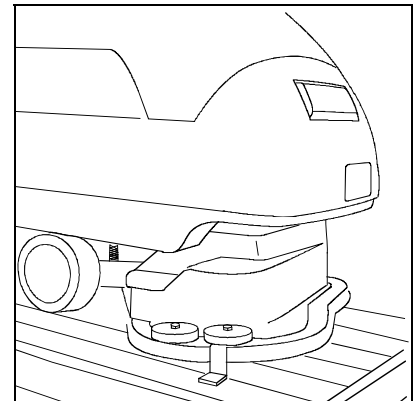




MACHINE PREPARATION

3. INSTALLATION OF THE BATTERIES INTO THE MACHINE

The batteries must be fitted in the suitable compartment under the recovery tank and must be handled by using appropriate lifting equipment suitable both for the weight and for the coupler system. They must moreover satisfy the requirements quoted in the Specification CEI 21-5.




ATTENTION! For maintenance, first charge and daily recharge of the batteries, it is necessary to follow strictly all the indications given from the constructor or from his dealer.
Specialized staff must carry out all the installation and maintenance operations.

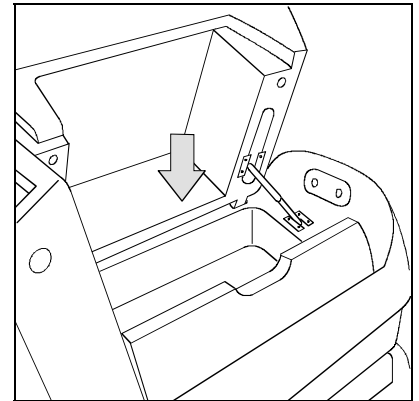


For the battery installation it is necessary to:

1. Lift the cover of the recovery tank (1)
2. Take off the suction plug (2) rotating it counterclockwise
3. Lift the recovery tank from the side. The lifting is simplified by a gas spring assembled between the two tanks

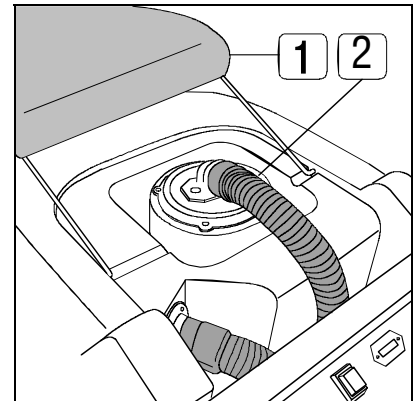

4. Make sure that the drainage hole placed on the bottom is not obstructed
5. Place the batteries
6. If the batteries are already charged, the machine connector can be assembled to the connector. Otherwise proceed with the charging as indicated in the following points
7. Reassemble everything once again

battery

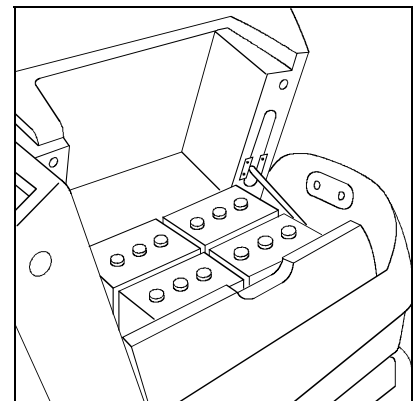


4. CONNECTION OF THE BATTERY CHARGER

The coupling connector of the battery charger is delivered together with the machine in the bag where this instruction booklet is found and must be assembled on the battery charger cables following the suitable instructions



ATTENTION! This operation has to be carried out by specialized staff. A wrong or incomplete cable connection to the connector can cause serious damages to persons or things

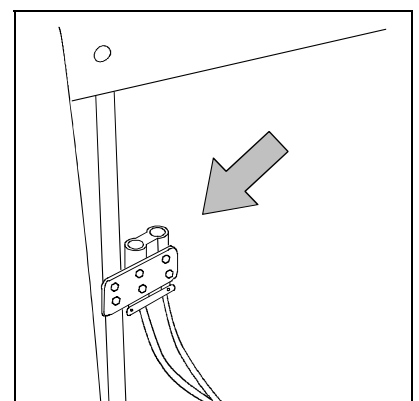




MACHINE PREPARATION

5. RECHARGE OF THE BATTERIES

In order not to cause the risk of permanent damages to the batteries, one should at all costs avoid their complete discharge and effect recharging within a few minutes after that the signal lamp of discharged batteries begins to blink.

NOTE: Never leave the batteries completely discharged, even if the machine is not being used. When recharging the batteries, lift always the tank. Every 20 recharging operations, check the level of the electrolyte and, if necessary, top up with distilled water.

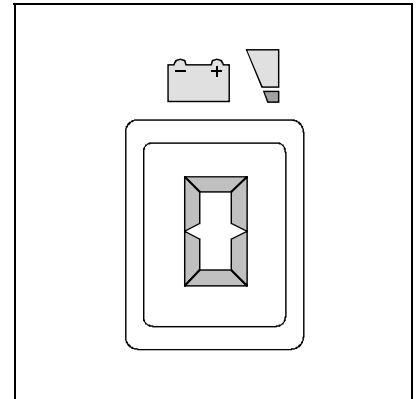


ATTENTION! For the daily recharge of the batteries, it is necessary to follow strictly all the indications given from the constructor or from his dealer. Specialized staff must carry out all the installation and maintenance operations.



ATTENTION! Danger of gas exhalations and emission of corrosive liquids




ATTENTION! Fire danger: do not approach with free flames

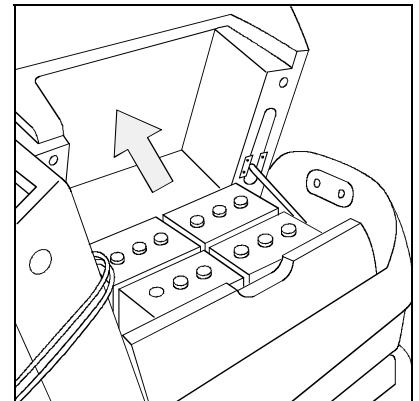

6. CONNECTION OF THE BATTERY CONNECTOR

The machine connector (2) has to be connected to the battery connector (1)

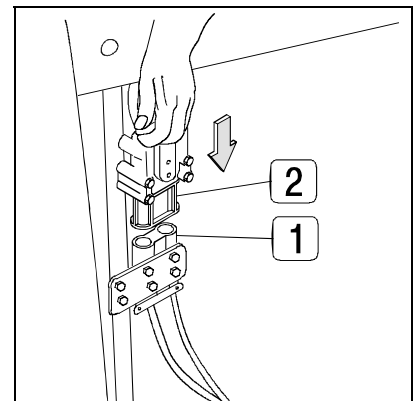


7. BATTERIES' INDICATOR

The batteries' indicator is digital with 4 fixed positions and a blinking one. The numbers, which appear on the display, show the approximate charge level.

4 = maximum charge, **3** = charge 3/4, **2** = charge 2/4, **1** = charge 1/4,
0 = (blinking) discharged batteries)



ATTENTION! Some seconds after that "0" blinks, the brushes motor automatically switches off. Anyway, the machine can finish to dry before recharging the batteries.

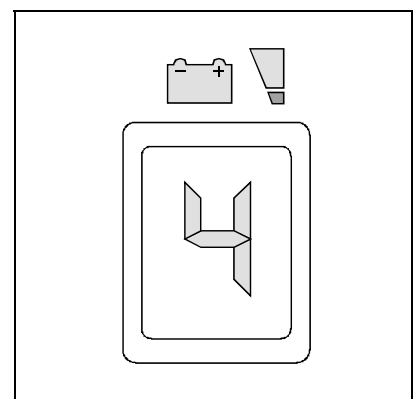




MACHINE PREPARATION

8. SQUEEGEE ASSEMBLY

The squeegee, which is packed separately from the machine, should be assembled as shown in the figure. Insert first the left squeegee pin (1) in the left arm slot, then the right pin (2) into the right slot, paying attention to keep the spring and the washer over the blade of the arm itself. To simplify this operation the handwheel placed on top of the pin should be loosened previously. Afterwards, lock the handwheel to block the squeegee in position.


Fit the squeegee hose into its coupling (3)

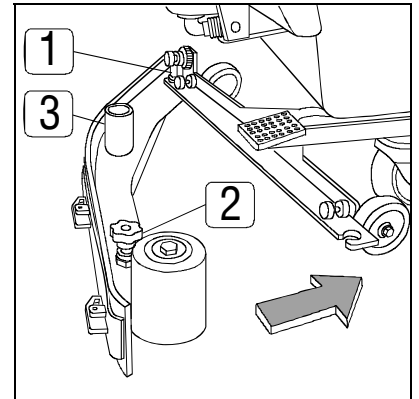

9. ADJUSTMENT SQUEEGEE HEIGHT



The squeegee has to be regulated depending on the wearing of the rubbers. To adjust this, rotate the knob (1) of each wheel clockwise to lift the squeegee and counterclockwise to lower it.

Note: The right and left wheels must be adjusted at the same amount so that the squeegee works in parallel to the floor.

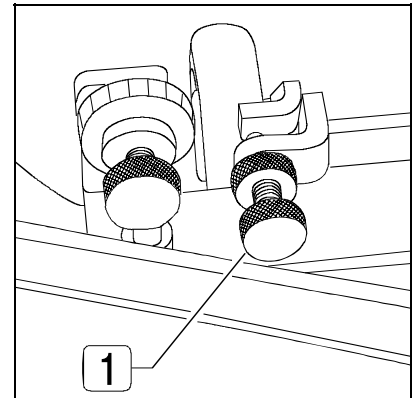

10. ADJUSTMENT SQUEEGEE INCLINATION

During working operation, the rear rubber has to work slightly tilted backwards and this equally in its whole length for about 5mm. Should it be necessary to increase the rubber bending in the central part, then tilt the squeegee body backwards and turn the adjuster (1) counterclockwise. If the rubber bending is to be noticeable at the sides of the squeegee, turn the adjuster clockwise. At the end of the adjustment, block the adjuster nut.

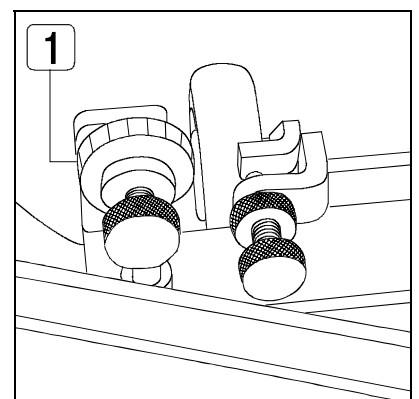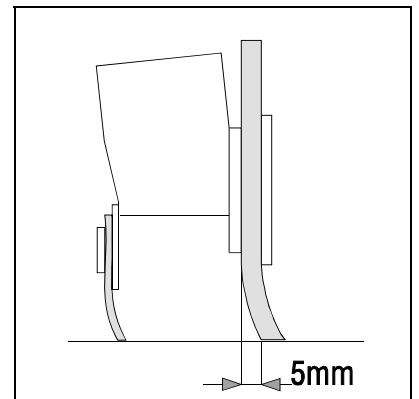




MACHINE PREPARATION

11. BRUSHES ASSEMBLY


1. Lift the brushes base acting upon the pedal (1)
2. Hook the lever (2)
3. Turn the key into position **0**.




ATTENTION! To carry out the operations of brush assembly with connected current can cause damage to the hands.

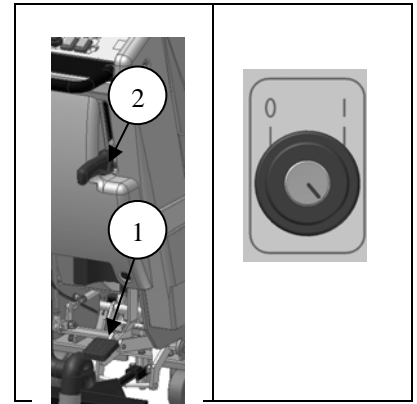

4. With the brushes base in lifted position, insert the brushes into the seat of the plate under the base until the three buttons fit into the holes of the plate. Turn the brush so that the buttons are pushed towards their retaining springs until the brush is clamped in place. The figure shows the direction of rotation for the coupling of the right brush. The left brush has to be rotated inversely.

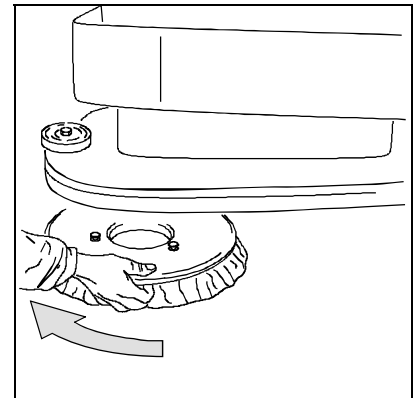

5. It is recommended to invert daily the position of the right brush with the left one and vice versa. If the brushes are not new and they show deformed bristles, it is better to reassemble them in the same position (the right to the right side and the left to the left side), to avoid that the different inclination of the bristles causes an overload to the brushes motor and excessive vibrations.

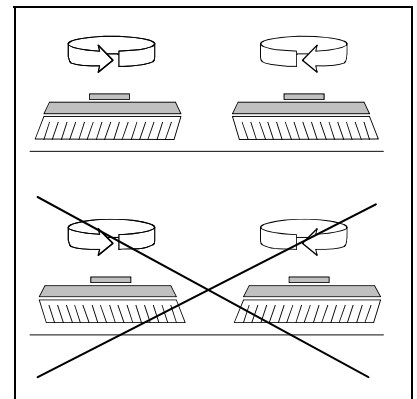




MACHINE PREPARATION

12. RECOVERY TANK


Open the cover (1) and check that the suction connection (2) is properly blocked by fitting the notches into its proper seat rotating it clockwise and that it is connected regularly to the hose which goes to the suction motor.

Check furthermore that, the squeegee hose (3) is properly placed in their seats and that the plug of the exhaust pipe, which is located in the rear part of the machine, is closed.

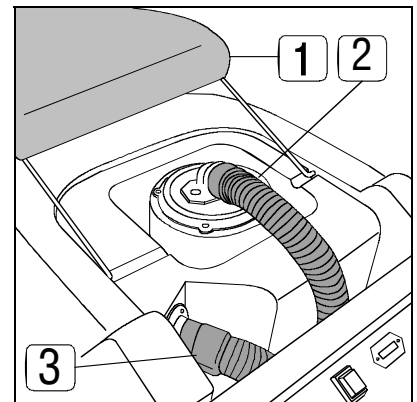

13. OUTER FILTER


Check that the outer filter, placed between the cock and the solenoid valve, is assembled correctly and that it is clean.

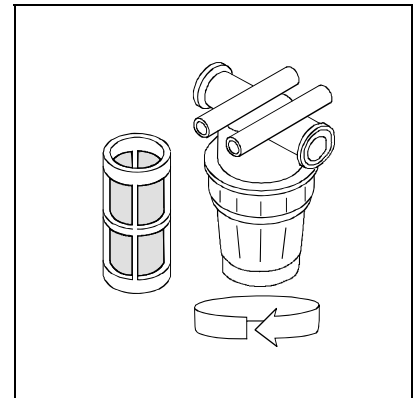

14. SOLUTION WATER

Fill the solution tank with clean water at a temperature not more than 50°C and add liquid detergent in the proper concentration following the instructions of the manufacturer. Excess foam could damage the suction motor, so use only the minimum amount of detergent necessary.

ATTENTION! Always use low foam detergent. To avoid the production of foam, before starting to clean, put a minimum quantity of antifoam liquid into the recovery tank. **Never use pure acid.**

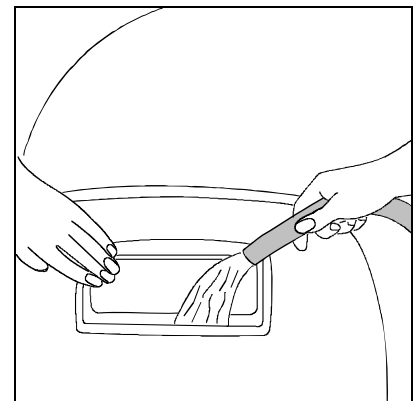



GENERAL RULES OF SECURITY

The rules below have to be followed carefully in order to avoid damages to the operator and to the machine.


- Read the labels carefully on the machine. Do not cover them for any reason and replace them immediately if damaged
- The machine must be used exclusively by authorized staff that has been instructed for its use
- During the working of the machine, pay attention to other people and especially to the children
- Do not mix different detergents, avoiding harmful odours
- Do not place any liquid containers onto the machine
- The storage temperature has to be between -25°C and +55°C
- Operating conditions: room temperature between 0°C and 40°C with respective humidity between 30 and 95%
- Do not use the machine in explosive atmosphere
- Do not use the machine as a means of transport
- Do not use acid solutions which could damage the machine and/or the persons
- Avoid working with the brushes when the machine stands still, in order to prevent floor damages
- Do not vacuum inflammable liquids
- This appliance is not suitable for picking up hazardous dust
- In case of fire, use a powder extinguisher. Do not use water
- Do not strike shelveings or scaffoldings, where there is danger of falling objects
- Adapt the utilization speed to the adhesion conditions
- Do not use the machine on areas having a higher gradient than the one stated on the number plate
- When the machine is in parking position, take off the key and insert the parking brake
- The machine has to carry out simultaneously the operations of washing and drying. Different operations have to be carried out in areas which are not permitted for the passage of non employed staff. Signal the areas of moist floors with suitable signs
- If the machine does not work properly, check by conducting simple maintenance procedures. Otherwise, it is better to ask for **COMAC** technical service
- Where parts are required, ask for ORIGINAL spare parts to an agent and/or to an authorized **COMAC** dealer
- Use only original **COMAC** brushes indicated in the paragraph "CHOICE AND USE OF BRUSHES"
- In case of danger act immediately upon the emergency brake
- Take off the key or remove the battery connector before any maintenance, cleaning or parts' replacement is done
- Do not take off the pieces which require the use of tools to be removed
- Do not wash the machine with direct water jets or with high water pressure nor with corrosive material
- Every 200 working hours have a machine check through a **COMAC** service department
- Be sure the recovery tank is empty before lifting it
- In order to avoid scales on the solution tank filter, do not fill the detergent solution many hours before the machines' use
- Before using the machine, check that all doors and coverings are in their position as indicated in this use and maintenance catalogue
- Provide for the scrapping of the material of normal wear following strictly the respective rules
- When, after years of precious work, your **COMAC** machine has to be abandoned, provide for the scrapping in appropriate centres, because of the presence of toxic-harmful materials, especially oils, batteries and electronic components, and considering that the machine itself has been constructed using materials integrally recyclable




PERFORMANCE

SETTING FOR WORK


1. Connect the machine connector to the one of the batteries (1)
2. Turn the key of the general switch (2) into position I (clockwise). Immediately, the signal lamp comes on (3)

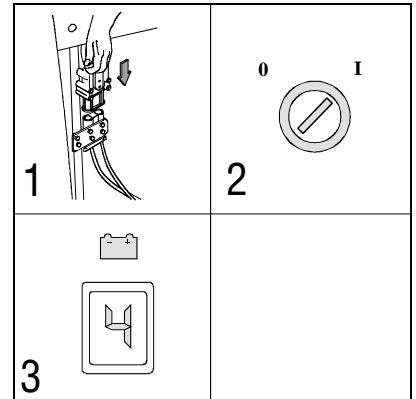


3. Press the traction motor switch (1)
4. Press the brushes motor switch (2)
5. Press the suction motor switch (3)
6. Press the solenoid valve switch (4)

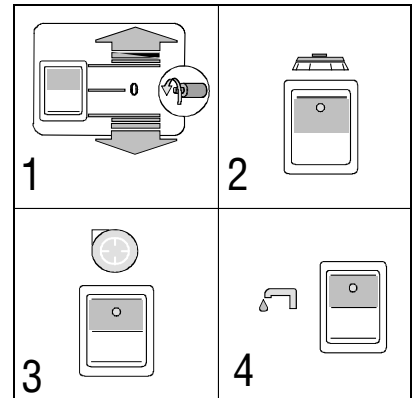

7. Acting upon the cock lever (1) adjust the quantity of the detergent solution which has to be sufficient to wet the floor uniformly but not too much to get out of the splash guard. Please keep in mind that, the correct solution quantity depends always on the type of floor, the dirt and the speed.
8. Lower the brushes base acting upon the pedal (2) and releasing the lever (3)
9. Let down the squeegee acting on the pedal (4) and unhook the lever (5)
10. Check that the parking brake (5) is released

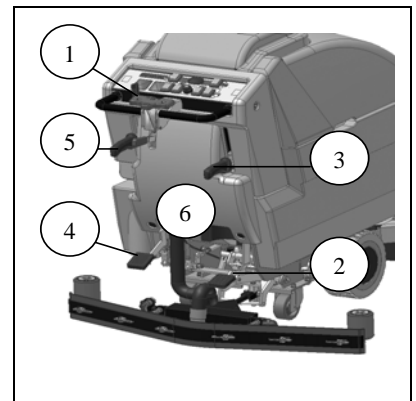

10. Push forward the traction control lever (1), so that the machine in presence of the operator, starts to move forward and the brushes start to turn. Check within the first meters, that the quantity of solution is sufficient and the squeegee dries completely the floor.
The machine starts to work now with its complete efficiency until the cleaning solution is used up.

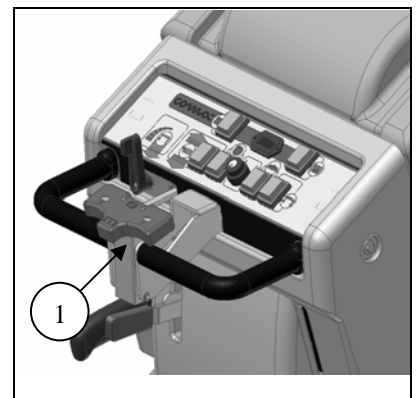




PERFORMANCE

MOVEMENT


Forwards: The traction of these machines is obtained through a flat belt put into tension with the lever (1) as indicated in the figure. The movement speed is proportional to the force carried on the lever.

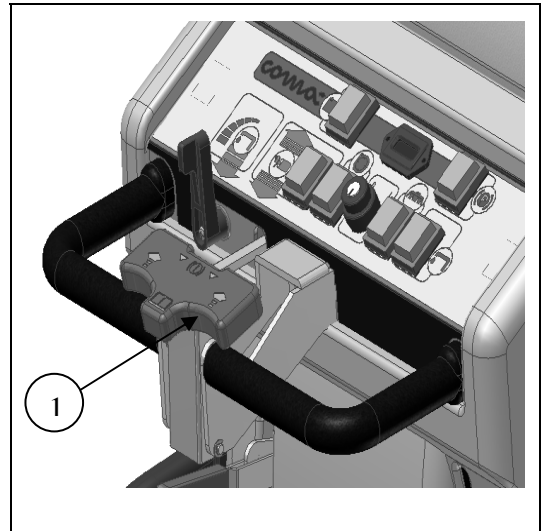

Reverse movement: The reverse movement of the machine will be activated pushing the control lever forward (1) and acting on the lower part of the motor switch (2).



ATTENTION! When carrying out even short backward movements, make sure that the squeegee is lifted.

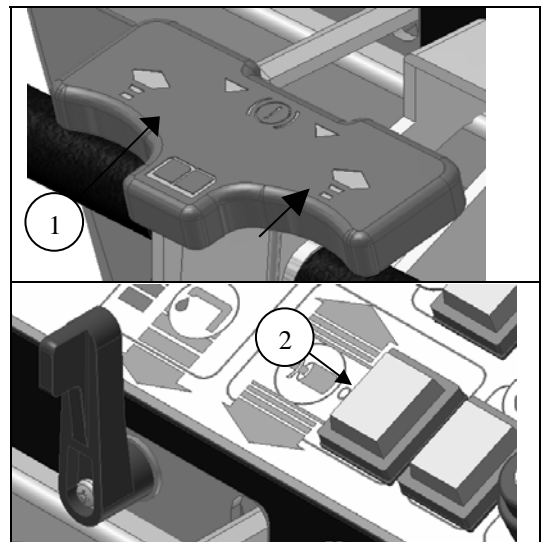


BRAKE

The machine is equipped with two braking systems. A working brake controlled through the drive lever (1) and an emergency and parking brake controlled through the lever (2).

In order to reduce to speed let the control lever (1) free.

If during work occurs a dangerous situation pull the speed control lever (1) back and push the emergency brake (2) downwards. These commands will block the traction of the machine. In order to continue, after the problem was resolved, unhook the lever of the brake (2) and push the speed control lever forward.

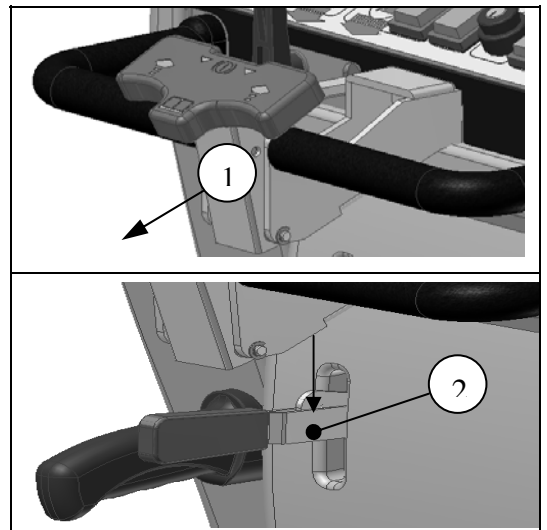




PERFORMANCE

DEVICE TOO FULL

The machine is equipped with a float, which intervenes when the recovery tank is full causing the closure of the suction hose.

It may be noticed, that the suction motor rises considerably its revolutions. In that case, it is necessary to stop immediately the suction motor and proceed with the emptying of the recovery tank taking off the plug of the exhaust pipe.

ATTENTION! This operation has to be carried out using gloves to protect from contact with dangerous solutions.

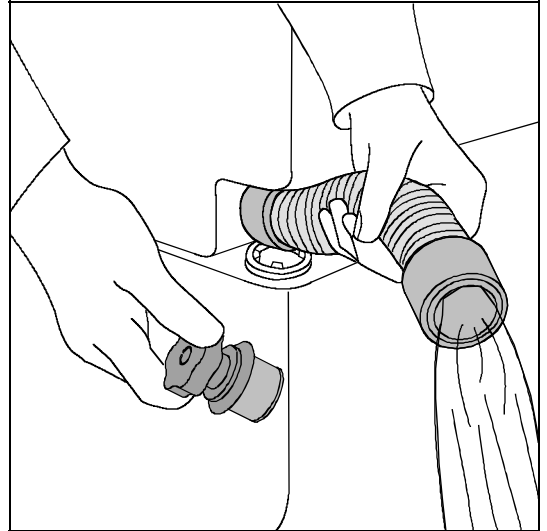





ON COMPLETION OF THE WORK

Having finished the job and before any type of maintenance is done:

1. Close the cock through the lever (1)
2. Lift the brush base acting on the pedal (2) and hook the lever (3).
3. Lift the squeegee acting on the pedal (4) and hook the lever (5).
4. Activate the brake pushing the lever (6) downwards.

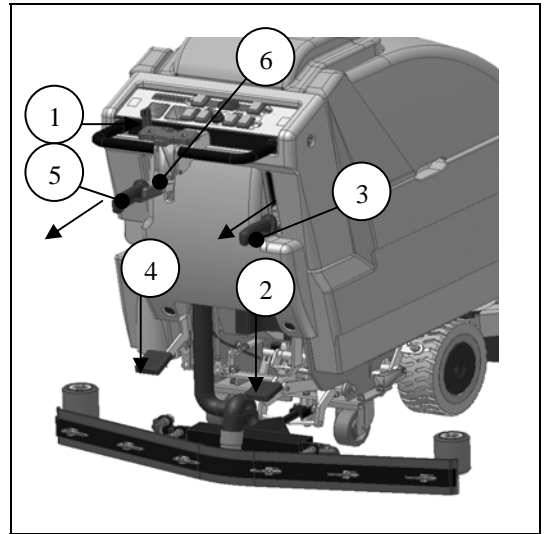

5. Switch off the solenoid valve switch and the suction motor switch (1)
6. Switch off the brushes motor switch (2)
7. Bring the machine up to the place provided for the water outlet
8. Switch off the switch of the general motor (3)
9. Turn the key (4) into position 0 (counterclockwise)
10. Insert the parking brake

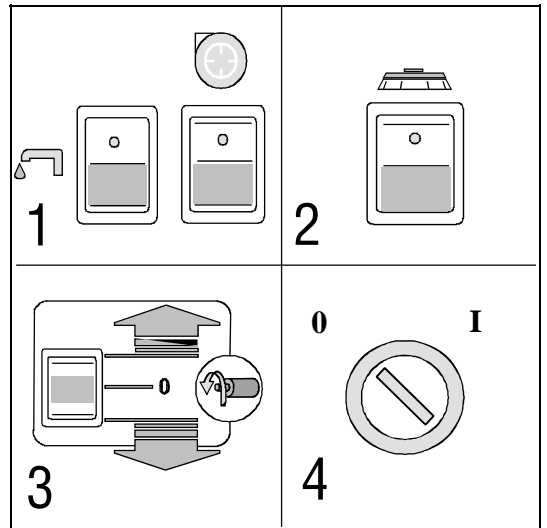


11. Release the hose placed on the rear panel
12. Unscrew the exhaust plug and empty the tank



ATTENTION! This operation has to be carried out using gloves to protect from contact with dangerous solutions.

13. Take off the brushes and clean them with a water jet (for the brushes disassembly please read further on under "DISASSEMBLY OF THE BRUSHES")

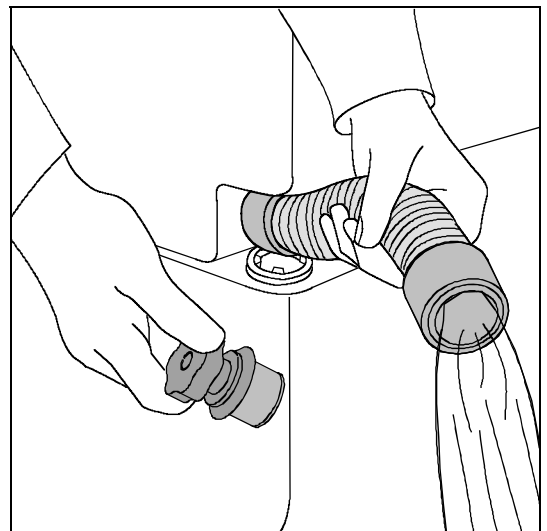




DAILY MAINTENANCE

CLEANING RECOVERY TANK


1. Release the hose placed on the rear panel
2. Unscrew the exhaust plug and empty the tank completely



ATTENTION! This operation has to be carried out using gloves to protect from contact with dangerous solutions.

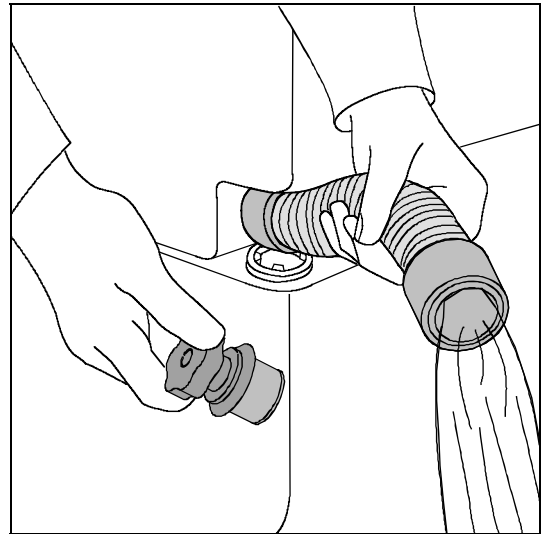

3. Lift the cover of the recovery tank
4. Take off the suction plug rotating it counterclockwise
5. Take off the filter and its protection
6. Rinse everything with a water jet; if a thorough cleaning should be necessary, see under "CLEANING SUCTION FILTER"
7. Rinse thoroughly the inside of the tank
8. Reassemble everything

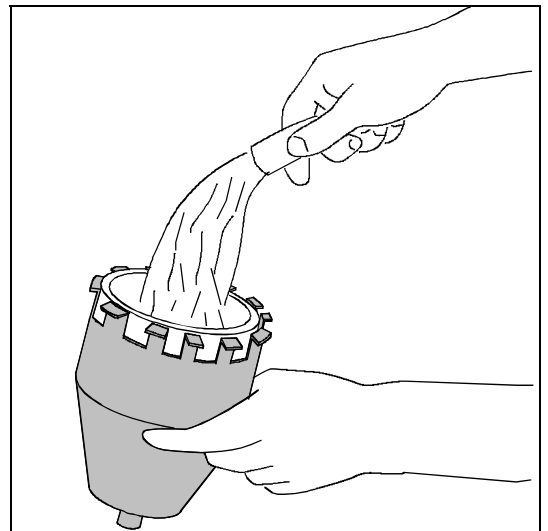




DAILY MAINTENANCE


CLEANING SUCTION FILTER

1. Lift the cover
2. Take off the suction plug by rotating it counterclockwise
3. Take off the filter with the antifoam protection
4. With a water jet clean the walls and the bottom of the filter
5. Wash thoroughly all components
Reassemble everything repeating above-mentioned operations inversely

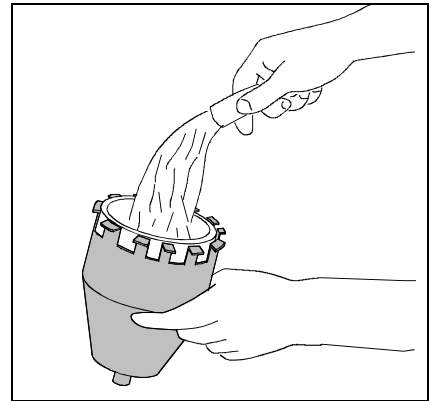

CLEANING SOLUTION FILTER

1. Close the water cock
2. Unscrew the filter placed under the rear left side of the machine
3. Extract the cartridge from the filter and clean it with a water jet
4. Reassemble everything repeating inversely above-mentioned operations

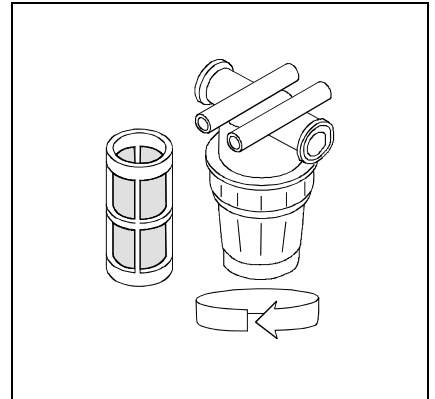


CLEANING OF THE SQUEEGEE

In order to have the best drying results, check that the squeegee is always clean.

To clean the squeegee it is necessary to:


1. Take off the hose (1) from the squeegee
2. Release the squeegee
3. Clean the inside of the squeegee thoroughly
4. Clean the squeegee rubbers thoroughly
5. Reassemble everything once more

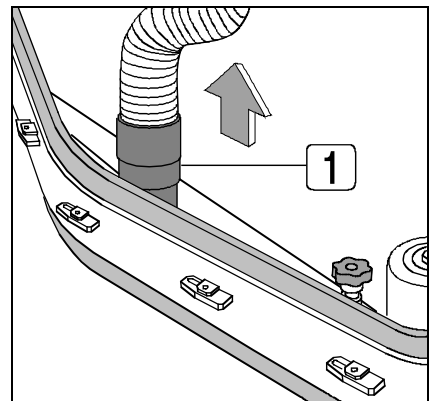

REPLACEMENT REAR SQUEEGEE RUBBER

If the rear squeegee rubber is worn and does not dry well, it is possible to change the drying edge proceeding as follows:

1. Push and turn the support plates (1) as shown in the figure.
2. Slip off the rubber blade and the rubber itself
3. Turn the rubber (2) upside-down and if necessary, replace it
4. Reassemble everything repeating inversely above operations
5. Adjust the squeegee height depending on the rubber (see under "ADJUSTMENT SQUEEGEE HEIGHT")

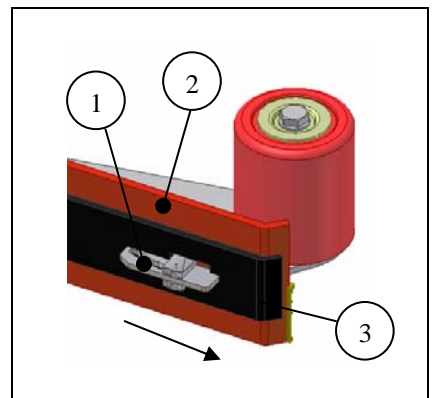




DAILY MAINTENANCE

REPLACEMENT FRONT SQUEEGEE RUBBER

If the front squeegee rubber is worn, a good suction is not achieved and therefore the machine does not dry perfectly. In that case proceed as follows with the replacement:

1. Take off the squeegee loosening the register (1)
2. Unscrew the nuts, which hold the front rubber plate of the squeegee.
3. Remove the front rubber plate.
4. Slip off the rubber and replace it
Reassemble everything repeating inversely above operations

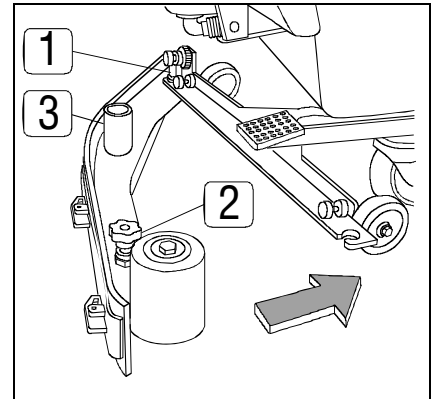


DISASSEMBLY OF THE ROTATING BRUSHES

The procedure of the operations of the brushes assembly is the following:


1. Lift the brushes base acting upon the pedal (1) and hook the lever (2)
2. Brake the machine acting on the lever (3)
3. Rotate the key into position **0** and take it off from the switch




ATTENTION! To carry out the operations of the rotary brushes' disassembly with connected current can cause serious damages to the hands.

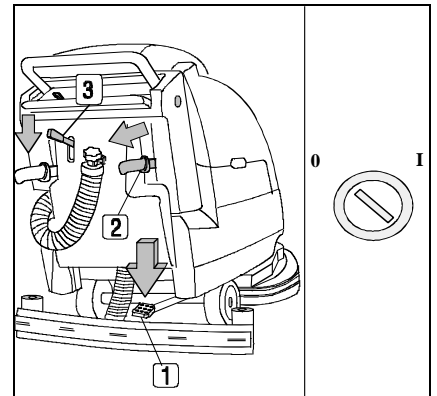

4. Unhook the splash guard rubber of the brushes base (for the disassembly of the splash guard rubber see "REPLACEMENT SPLASH GUARD BRUSHES BASE")

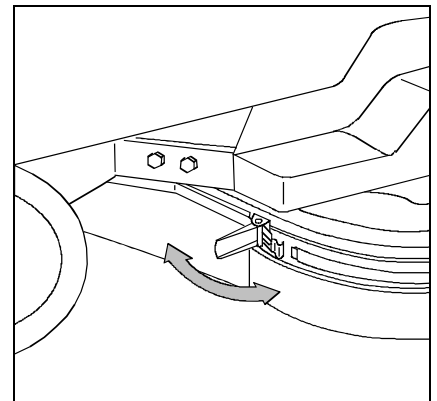

5. Rotate the brush until it comes off from the brush plate seat as shown in the figure. The figure shows the rotating direction of the right brush disassembly, the left one has to be rotated inversely

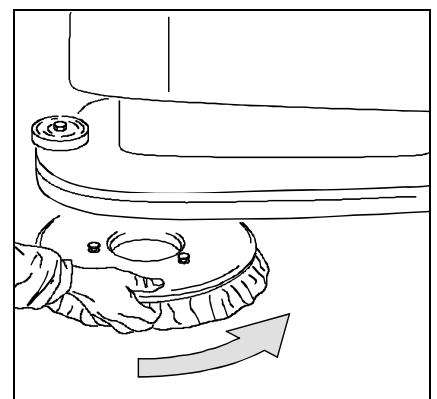




WEEKLY MAINTENANCE


CLEANING OF THE SQUEEGEE HOSE

Weekly or whenever suction seems to be unsatisfactory check that the squeegee hose is not obstructed. Eventually, clean it proceeding as follows:

1. Take off the hose from its coupling on the squeegee
2. Take off the other end from the recovery tank

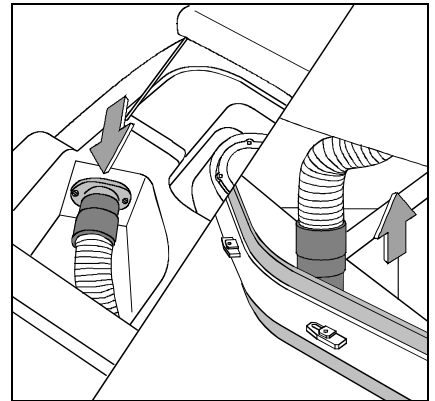



3. Wash the inner part of the hose with a water jet introduced from the side where it is being connected to the tank
4. To reassemble the hose repeat the above-mentioned operations inversely

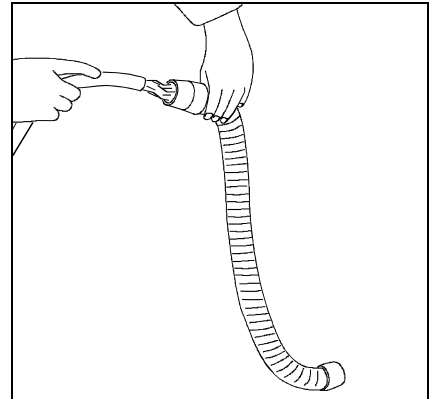

ATTENTION! Do not wash the hose, which goes from the suction motor to the suction plug.

CHECK BRAKE


Once a week check the distance between the brake pads of the emergency brake and the wheels. Lower the drive lever (1) until the handle bar is touched, unscrew the nuts and locate the brake pads at a distance of 1mm from the wheels.

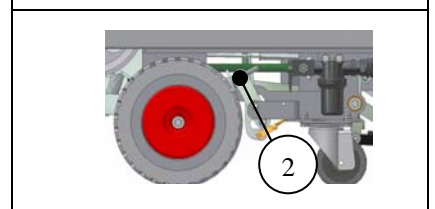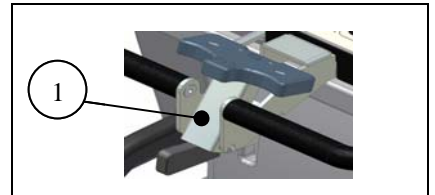

REPLACEMENT SPLASH GUARD BRUSHES BASE

Check the condition of the splash guard brushes base. If necessary, to replace it, proceed as follows:

1. Unhook the two metallic blades (1)
2. Take off the splash guard and replace it
Reassemble everything repeating inversely above operations

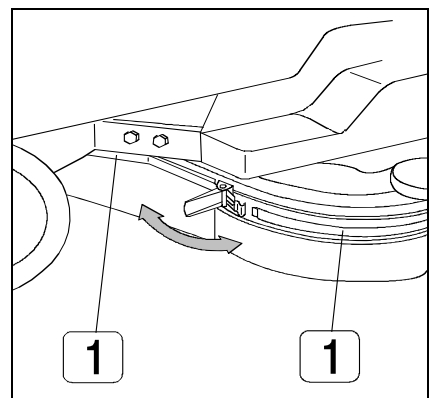




TROUBLE SHOOTING GUIDE

INSUFFICIENT WATER ONTO THE BRUSHES

1. Make sure that the key (1) is on position I
2. Make sure that the switches of the solenoid valve and of the brushes are on (2)
3. Make sure that the traction motor switch is in forward position (3) and that the handle bar is lowered
4. Make sure that the cock (4) is open
5. Make sure that there is water in the solution tank
6. Make sure that the filter is not obstructed
7. Check the functioning of the solenoid valve

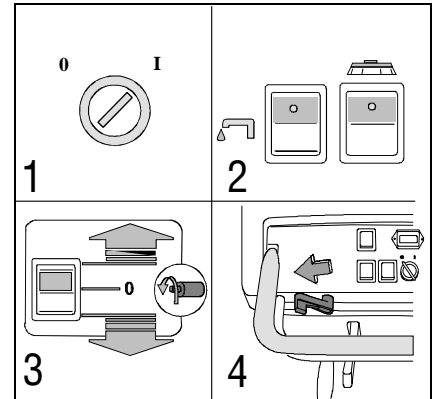

THE MACHINE DOES NOT CLEAN SATISFACTORILY

1. Check the condition of the brushes and replace them, if necessary (the brushes have to be replaced when the length of the bristles is less than 15mm)
2. Use a different kind of brush to the one fitted as standard. For cleaning operations on floors where the dirt proves to be particularly resistant, we recommend using special brushes that may be supplied optionally according to needs (see under "CHOICE AND USE OF BRUSHES")
3. Check that the detergent used is in the right concentration and suitable for its use

THE SQUEEGEE DOES NOT DRY PERFECTLY

1. Check that the suction motor switch is on
2. Check and if necessary adjust the squeegee height and its inclination
3. Check the squeegee rubbers, clean them or replace them, if worn
4. Check that the recovery tank is empty
5. Check that the squeegee hose is correctly fitted in its housing on the recovery tank
6. Check that the suction hose is correctly fitted on the suction motor and on the filter opening
7. Check that the suction filter is clean
8. Check that the plug of the exhaust hose is correctly fitted

EXCESSIVE FOAM PRODUCTION

Check that a low foam detergent has been used. If required, add a small quantity of antifoam liquid into the recovery tank.

Remember that, when the floor is not very dirty, more foam is generated. In this case dilute more the detergent.



CHOICE AND USE OF BRUSHES

POLYPROPYLENE BRUSH (PPL)

It is used on all types of floors, which are hot water resistant (not more than 60°C). The Polypropylene brush is nonhygroscopic and therefore conserves its characteristics even if working in the wet conditions.

NYLON BRUSH

It is used on all types of floors with excellent wear and hot water resistance (more than 60°C). The nylon is hygroscopic and so, over time, loses its characteristics working on the wet.

ABRASIVE BRUSH

The brush bristles are charged with very aggressive abrasives. It is used to clean very dirty floors. To avoid floor damages, work strictly only with the necessary pressure.

STEEL BRUSH

The bristles are made of steel wires or flat blades or can be mixed, by means of steel and synthetic fibres. The steel wire brush is used to descale very uneven floors or with wide joints. The brush with steel blades is used to scrape off more resistant incrustations.

THICKNESS OF THE BRISTLES

The thicker the bristles are, the more rigid they will be. These ones are therefore used on smooth floors or with small joints.

On uneven floors with deep joints it is recommended that, softer bristles, which enter more easily in depth, are used.

Please bear in mind that, when the bristles are worn out and get too short, they will get rigid and cannot penetrate anymore. As well as for thick bristles, the brush will begin to jump.

PAD HOLDER

The pad holder is recommended to clean glossy areas.

There are two types of pad holders:

1. The traditional pad holder is equipped with anchor points, which allow the abrasive pad to be held and dragged during the work process.
2. The pad holder is of the CENTER LOCK type, apart from the anchor points, is equipped with a central blocking release system made in plastic. This allows a perfect match with the abrasive pad and to hold it without the risk of falling down. This type of pad holder is recommended especially for machines with more brushes, where the centering of the pads is difficult.

LIST FOR THE CHOICE OF THE BRUSHES

Machine	Q.ty	Code	Bristles type	Thickn.Ø	Ø Brushes	Notes
Media 26	2	66807010	PPL	0.3	345	Pad blocking
		66807020	PPL	0.6	345	
		66807030	PPL	0.9	345	
		66807040	ABRASIVE	1	345	
		66718010	Pad holder Center Lock		335	
Media 32	2	66803010	PPL	0.3	430	Pad blocking
		66803020	PPL	0.6	430	
		66803030	PPL	0.9	430	
		66803040	ABRASIVE	1	430	
		66703020	Pad holder Center Lock		410	



EC DECLARATION OF CONFORMITY

The undersigned company:

COMAC S.p.A.

Via Ca' Nova Zampieri no. 5
37057 San Giovanni Lupatoto (VR), Italy

Declares that the machine:

MEDIA 26 – MEDIA 32 FLOOR SCRUBBER DRIER

Complies with the provisions of the following directives:

- 98/37/CEE: Machinery directive.
- 89/336/EEC: Electromagnetic Compatibility Directive and subsequent amendments 91/263/EEC, 92/31/EEC and 93/68/EEC.

It also complies with the following standards:

- EN 60335-1: Household and similar electrical appliances - Safety. Part 1: General requirements.
- EN 60335-2-72: Household and similar electrical appliances. Part 2: Particular requirements for automatic machines for floor treatment for commercial and industrial use.
- EN 12100-1: Machine safety - Fundamental concepts, fundamental principles of design - Part 1: Basic methodology terminology.
- EN 12100-2: Machine safety - Fundamental concepts, fundamental principles of design - Part 2: Technical principles.
- EN 61000-6-3: Electromagnetic compatibility (EMC) - Part 6-3: Generic standards — Emission standard for residential, commercial and light-industrial environments.
- EN 61000-6-1: Electromagnetic compatibility (EMC) - Part 6-1: Generic standards - Immunity for residential, commercial and light-industrial environments.
- EN 50366: Household and similar electrical appliances - Electromagnetic fields Methods for evaluation and measurement.

San Giovanni Lupatoto, 05/02/2007

COMAC S.p.A.
Legal representative
Giancarlo Ruffo

COMAC spa

Via Cà Nova Zampieri,5 – 37057 San Giovanni Lupatoto – Verona – ITALY
Tel. +39 045 8774222 – Fax +39 045 8750303 – E-mail: com@comac.it o info@comac.it - www.comac.it